



English

Français

Deutsch

Español

Thank you for purchasing this Rega product.

Please follow this quick set up guide to ensure optimum performance and perfect operation. Failure to do so may invalidate your warranty. For more information on this product please visit www.rega.co.uk



- 1 Platter
- 2 Drive belt & pulley
- 3 Tonearm
- 4 Balance weight
- 5 Plinth
- 6 Power input
- 7 Phono output
- 8 On/Off switch (underneath plinth)

Unpacking the Planar 2


- Always keep the turntable flat.
- Follow the packing guide printed inside the front of the box.
- Save the packaging in case you need to transport your turntable in the future.
- Place the turntable on a rigid level surface.*
- Ensure the drive belt is in place and remove the transport hub card from beneath the sub platter.
- Carefully place the glass platter on the hub and fit the turntable mat.

* The Rega turntable wall bracket is the ideal solution.

Connection to the amplifier


The tonearm external phono leads must be connected to a suitable phono stage.

Connect as follows: Red=right channel. Black=left channel. If your amplifier does not have an integrated phono stage you will require an external stage.*

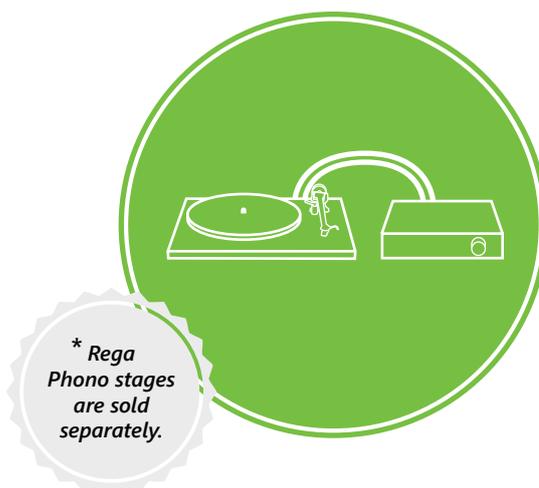

Setting up the RB220 tonearm

To set up the RB220 tonearm, screw on the balance weight (A) along its shaft (B) until the stylus is floating 1mm clear of a record on the platter. Tracking force can now be applied, half a turn of the weight (180 degrees) = 1 gram of force. Turn the weight to the suggested force of your cartridge manufacturer's guidelines. The suggested force for the supplied Carbon cartridge is 2 grams (360 degrees). Use the plastic plugs on the weight as a guide. Bias adjustment is automatic on the RB220 tonearm.

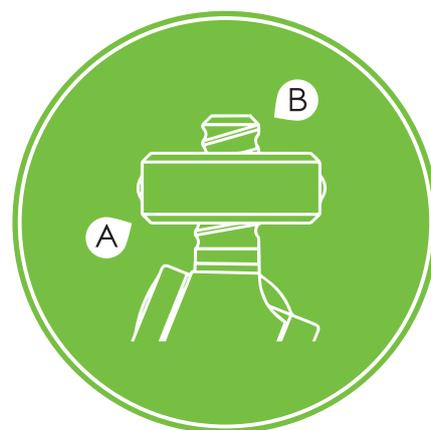

Manual speed change

You can change playing speed by simply removing the glass platter and moving the drive belt between either the 33 1/3rpm or 45rpm wheels of the drive pulley as shown.



Cartridge alignment protractor

The Planar 2 comes with the Rega Carbon cartridge aligned ready for play. If you need to replace or upgrade the cartridge please use the cartridge alignment protractor provided along with the cartridge manufacturers guidelines.**

